



Remove 3 plastic push rivets



ECU →

↑
unplug trunk light

↑
**With The plastic rivets removed gently pull
back carpet to access the ECU**