INSTALL GUIDE

Porsche 986 Boxster BMC F1 Air Filter

SKU: FS.POR.986.BMC

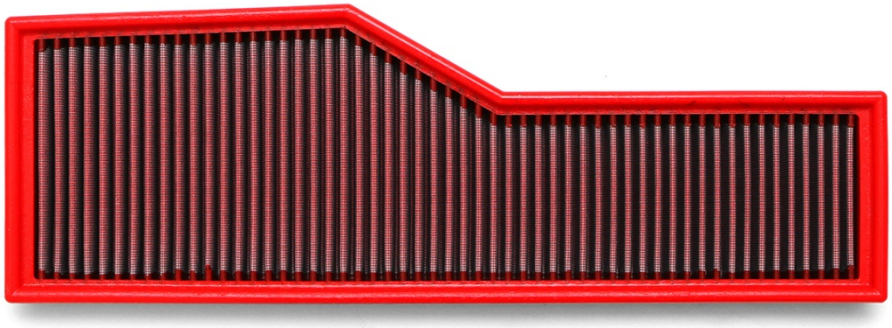

(FILTER SIZE/SHAPE VARIES BY VEHICLE)

Required Tools

Flat Head Screw Driver (Optional)

CAUTION

- *Always allow car to cool before performing any installation(s) or service(s) on it.*
- *Always be sure to work on an even and level surface when raising vehicle(s) with a jack, and support all raised vehicles with locked jack stands once elevated.*
- *Fabspeed Motorsport recommends that all installations be supervised or verified by a trained professional technician.*
- *Fabspeed Motorsport is not responsible for any personal injury or damage(s) sustained to a vehicle during installation of aftermarket performance parts.*

1. Place car in service position by activating convertible rooftop and stopping half way.

2. Remove cable from both sides.

3. Unclip plastic drip guard.

4. Fold up convertible roof top making sure the rear window folds in half and does not crease.

5. Turn (4) plastic fasteners securing the speaker and insulator 1/4 of a turn.

6. Unclip speaker plug from passenger side and remove speaker

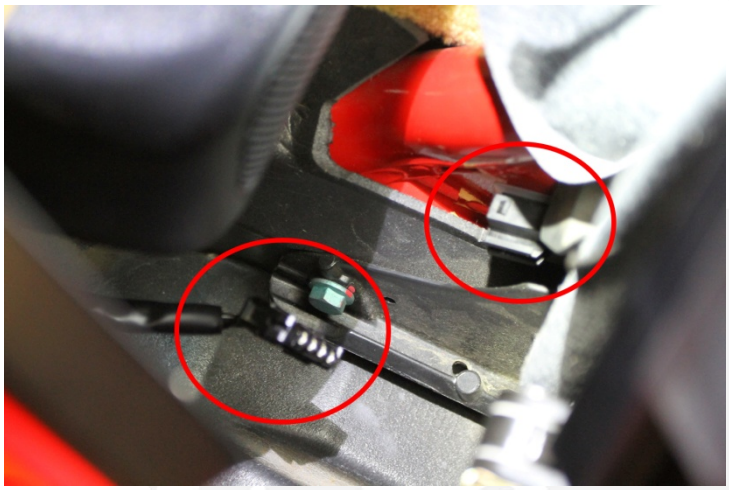

7. Remove bottom half of insulation.

8. Remove engine cover by loosening (5) fasteners by 1/4 turn.

9. Unclip air filter and slide out of factory air box.

10. Perform steps 1 through 9 in reverse to install the new BMC F1 Replacement Air Filter.

If you have any questions, comments, or concerns related to your product, please contact us!

FABSPEED
MOTORSPORT
EXOTIC CAR PERFORMANCE SPECIALISTS